Tools Required:

4mm Hex Key Phillips medium screwdriver Standard medium screwdriver







Dimensions

A: 24-1/2 " x 24-1/2"

2-/14"

Weight: 27.12 lbs.

Notice to Installer for 33 311:

- 1. For celiling or wall applications only.
- 2. Mounts directly to finished surface over standard recessed 4" octagonal wiring box (by others).
- 3. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting surface.
- 4. IMPORTANT: The installation surface must have an adequate load-bearing capacity.

 
33 311 - Installation:

 
- 1. Remove mounting frame by loosening hex screws and lifting. To seperate the locking device on the luminaire from the mounting frame, press the locking device against the spring and lift out. To take the mounting frame out of the luminaire housing, press the locking spring in the corner of the housing downwards. At the same time, push the mounting frame over the locking spring as far as it will go and remove it.
- 2. Install mounting frame onto finished surface using appropriate hardware (by others)
- 3. Make supply wiring and luminaire wiring connections inside wiring box: MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE

 
Dimming (if applicable):

DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE

- 4. Bring in luminaire housing at an angle of 30°, with hinged side fitting around the hinge bolts. Hold cover at this position while securing to the back housing.
- 5. Loosen the hex screws on the hinge bolts all the way.
- 6. Push hinge bolts of the back housing into the luminaire cover's slots.
- 7. Tighten hex screws firmly to secure.
- 8. To close luminaire cover, flip retaining brackets on cover upwards.
- 9. Swivel cover closed and hook retaining brackets into the safety fasteners.

 


 
















Relamping/Maintenance

Clean luminaire and lens using only solvent-free cleansers. No relamping required.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Replacement Parts

Description

Driver (120-277V) LED Module (3000K) 75969-04 LED-0461/830

Part No

LED Module (4000K) LED-0461/840

72W LED Lamp:

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.