

**Tools Required:**

- 3mm hex key
- 11/32" Nut driver
- Phillips medium screwdriver



**Dimensions**

- A:** 5-1/8"
- B:** 9-1/8"
- C:** 5-1/8"



**Protection Class:** IP64

**Weight:** 3.7 lb.

**Notice to Installer for 33 816**

1. Mounts directly to a standard 4" octagonal recessed wiring box (by others) using mounting plate (supplied).
2. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting wall.


**33 816 - installation:**

1. Loosen (2) 3mm set screws on luminaire housing and remove outer casting with lens.
2. Feed luminaire wires through luminaire base and adapter plate.
3. Make supply wiring and luminaire wiring connections in the wiring box:  
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
 GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE  
 0-10V Dimming (if applicable):  
 DIMMING CONTROL WIRE (+) TO PURPLE DRIVER WIRE;  
 DIMMING CONTROL WIRE (-) TO GREEN DRIVER WIRE.
4. Place a bead of silicone RTV around the outer edge of the back side of the adaptor plate that will come in contact with the finished wall (exterior applications only).
5. Attach adapter plate to wiring box using (2) 8-32 x 1/2" screws provided. Choose screw slots based on wiring box such that fixture will mount straight, with lens pointing downward.
6. Apply silicone RTV to outside edge of luminaire base and mount luminaire base over the mounting studs in adaptor plate. Tighten nuts (provided) to secure base.

**IMPORTANT:** note position of orientation arrow on mounting plate and install accordingly.

7. Replace outer casting and tighten (2) set screws, making sure the gasket is seated properly.

**Figure 1**

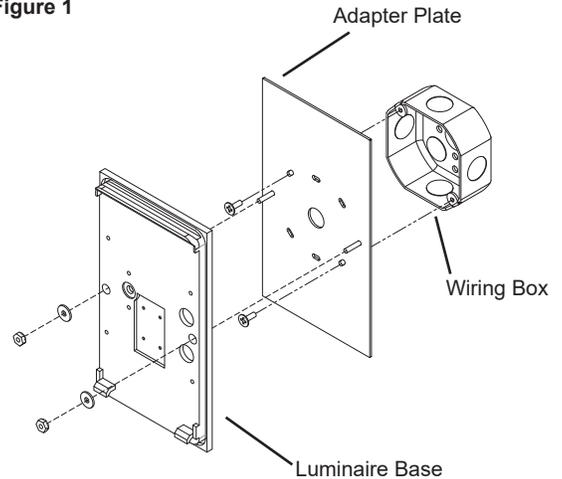

**Relamping/Maintenance**

Loosen (2) 3mm set screws on luminaire housing and remove outer casting with lens. Relamp. Clean luminaire and lens using only solvent-free cleansers. Replace lens and outer casing, making sure that the gasket is seated properly.

**Lamp:** 13.9W LED

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Replacement Parts**

Description	Part No
Diffuser	140783
Housing gasket	831219
Driver (120-270V)	75987
LED Module (3000K)	LED-0341/830
LED Module (4000K)	LED-0341/840

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

**Product Safety Warnings:**

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.**

**MIN 90°C SUPPLY CONDUCTORS.**

**CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.**

**LES FILS D'ALIMENTATION 90°C MIN.**