


Tools Required:

- 10mm Nut Driver
- 5mm Hex Key
- M6 Torx Key

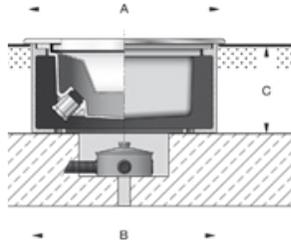

Dimensions

- A:** 10 "
- B:** 9-5/8 "
- C:** 4-3/4 "



Protection Class: IP67

Weight: 16.3 lbs

Notice to Installer for 77 024:


1. See page 2 for specific product safety warnings.
2. **BEGA luminaires may be damaged if connected to conduit systems containing water - Article 300-5G of National Electric Code requires that "Conduits or raceways through which moisture may contact energized live parts shall be sealed or plugged at either or both ends".**
3. A separate wiring box suitable for outdoor locations (Bell #5361-0 or equivalent) for power supply must be provided (by others).
4. Proper drainage **MUST** be provided. Failure to do so may result in over-condensation and void warranty.
5. For proper installation, HOUSING AND FINISHED SURFACE MUST BE INSTALLED SO THAT THE TOP OF THE HOUSING (BOTTOM OF FACEPLATE) SITS FLUSH OR SLIGHTLY ABOVE THE FINISHED SURFACE.
6. For vehicular loads, housing must be anchored to a suitable, load bearing foundation (1-1/2" minimum depth). In all other applications, load bearing foundation should be sufficient to support anticipated load onto fixture.
7. **WARNING:** LEDs are high quality electrical components. Please avoid touching them directly during installation.

Outer housing installation for 77 024:

1. Remove outer housing from inner housing by loosening (2) M6 socket head screws on faceplate and lifting out the inner housing.
2. Establish location of wiring box. (These luminaires are pre-wired with (9) feet of waterproof cable and factory sealed to the luminaire inner housing.) Make sure that enough cable is left to lift the inner housing out of the outer housing for relamping.
3. Establish foundation for anchorage and provide proper drainage.
4. Use (4) mounting holes in the bottom of outer housing to anchor it to a suitable foundation using hardware (by others). The top edge of the outer housing must be flush with the finished surface. Use grout, nuts, and washers for leveling.

Inner housing installation for 77 024:

1. Unscrew (2) M6 Torx head screws on faceplate of fixture.
2. Remove inner housing assembly from outer housing.
NOTE: DO NOT OPEN INNER HOUSING.
3. Run 5-wire cable from inner housing assembly through outer housing to make supply wiring and cable connections inside wiring box:
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE
 GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE
 Dimming (if applicable):
 DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE
 DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE
4. Replace inner housing assembly and orient correctly (adjustable at 90 degree intervals) when placing into outer housing.
5. Tighten (2) M6 Torx head screws to attach inner housing assembly to outer housing.

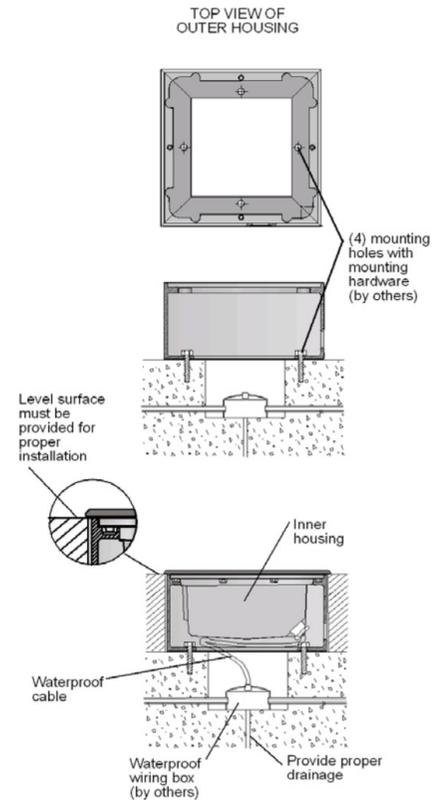

NOTE: Graphics are generic. Please see fixture submittal drawing for more detail.
www.bega-us.com

Relamping/Maintenance

No relamping required.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Replacement Parts

Description	Part No
Diffuser	140391+R
Gasket	830827
Driver (120-277V)	75985-01
LED (3000K)	LED-0313/830
LED (4000K)	LED-0313/840

Lamp: 25.3W LED

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

Product Safety Warnings:

MIN 90°C SUPPLY CONDUCTORS.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

LES FILS D'ALIMENTATION 90°C MIN.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.