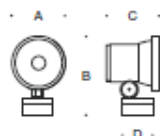


Tools Required:

3mm hex key
 5mm hex key
 Flat head screw driver medium
 Phillips head screw driver medium


Dimensions

A: 9"
 B: 11-3/4"
 C: 9"
 D: 5-1/8"


Protection Class: IP65

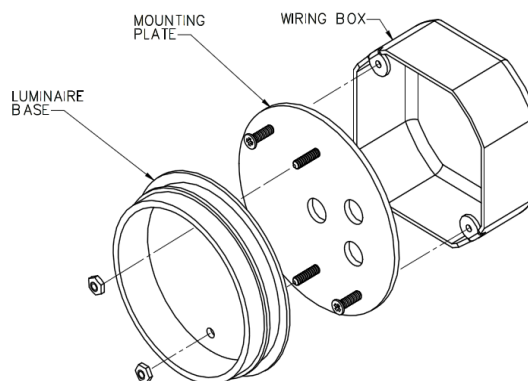
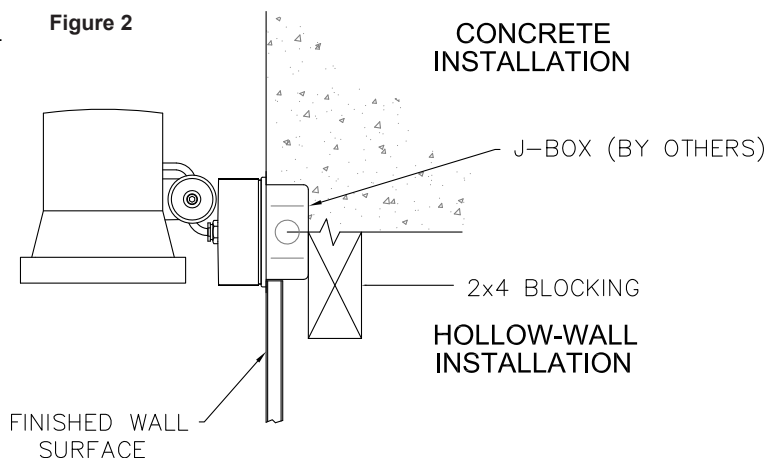
Weight: 10.1 lbs.

Notice to Installer for 77 659:

1. See page 2 for specific product safety warnings.
2. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting wall.
2. Integral LED driver supplied by BEGA.
3. Luminaire mounts directly to standard recessed 4" octagonal wiring (by others), using mounting plate provided.
4. Do NOT remove moisture absorption packet from luminaire housing.
5. LEDs are high-quality electronic components! Please avoid touching the light output opening of the LED directly during installation

77 659 - installation:

1. Loosen the (1) 3mm hex screw on the luminaire canopy and remove luminaire base from luminaire.
2. Feed luminaire wiring through the luminaire base and mounting plate.
3. Make supply wiring and luminaire wiring connections inside the wiring box:
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE
 Dimming (if applicable):
 DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE
 DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE
4. Attach provided mounting plate directly to a 4" standard octagonal wiring box using the (2) screws (provided). Place a small bead of silicone around the back side of the mounting plate that will come in contact with the finished surface (exterior applications only).
5. Align and position mounting plate on mounting surface to correspond with specified mounting orientation.
6. Slip luminaire base over the mounting plate. Tighten nuts on the studs (provided) to secure.
7. Replace luminaire canopy (with luminaire attached) and tighten (1) set screw.
8. To adjust head angle, use 5mm hex key to loosen adjustment screw. Adjust luminaire head as needed and tighten adjustment screw.

Figure 1

Figure 2

Relamping/Maintenance

Remove trim and lens by loosening screws. Clean luminaire and lens using only solvent-free cleansers. Replace trim and lens. Tighten screws.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Flat beam spread lens	70 065
180° glare shield	70 758
Internal louver	70 775

Replacement Parts

Description	Part No
Lens	140853
Lens gasket	831281
Driver (120-277V)	76001-02
LED Module 3000K	LED-0441/930
LED Module 4000K	LED-0441/940

Lamp: 48.2W LED Module

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

ATTENTION - RISQUE D'INCENDIE. CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.
