


Tools Required:

- 3mm hex key

Protection Class: N/A

Weight: 0.88lbs

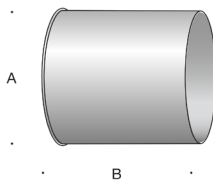

Dimensions

A: 8-1/4"

B: 5-3/8"



Notice to Installer:

1. See page 2 for specific product safety warnings.
2. The glare shield can be rotated 360°, prevents lateral glare from all directions.
3. Suitable for Bega floodlights:
84 409 • 84 222 • 84 223 • 84 224 • 84 227 • 84 359 • 84 225 • 84 226

79831 - Glare shield Installation:

1. Using 3mm hexagon socket wrench, undo (2) M4 screws [Figure 1] and insert the shield into the groove in the floodlight housing.
2. Align the glare shield as needed and secure it in place by tightening hexagon socket screw [Figure 3]

Figure 1:

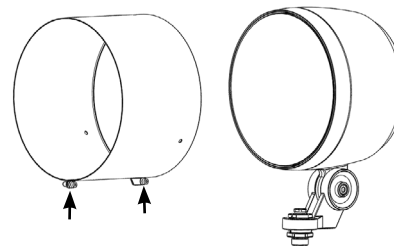


Figure 2:


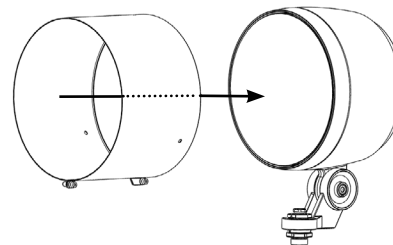


Figure 3:

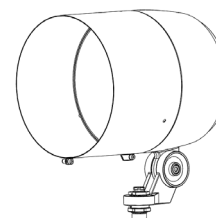

MINOR GAP FROM SLIT VISIBLE FROM GROUND FLOOR WHEN FLOODLIGHT ILLUMINATED AS ORIENTATED IN FIGURES

Maintenance:

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

Replacement Parts

Consult factory for all other replacement components.

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.