


**Tools Required:**

- 3mm hex head screwdriver
- Phillips head screwdriver
- 6mm hex head screwdriver

**Overview:**

LED Watts: 95.6W  
 System Watts: 107.0W  
 Controllability: 0-10V dimmable  
 Weight: 12.6 lbs.  
 Protection Class: IP65

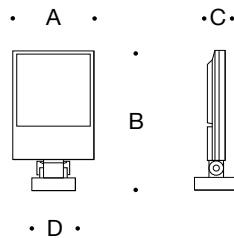

**Dimensions**

A: 9-3/4  
 B: 17-3/8  
 C: 2-1/8  
 D: 5-1/8




**Notice to Installer:**

1. See page 2 for specific product safety warnings.
2. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting surface.
3. Luminaire mounts directly to standard recessed 4" octagonal wiring (by others), using mounting plate provided.


**Installation: Luminaire**

1. Loosen the (1) 3mm hex head set screw on the fixture canopy to remove luminaire base.
2. Feed luminaire wiring through the luminaire base and mounting plate into wiring box (by others).
3. Make supply wiring connections to luminaire in wiring box:  
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
 GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE  
 Dimming (if applicable):  
 DIMMING CONTROL (+) TO POSITIVE LUMINAIRE DIM CONTROL WIRE  
 DIMMING CONTROL (-) TO NEGATIVE LUMINAIRE DIM CONTROL WIRE
4. Attach provided mounting plate directly to a 4" standard octagonal wiring box using the (2) phillips head screws (provided).
5. **Important!** Place a small bead of silicone around the back side of the mounting plate that will come in contact with the finished surface (exterior applications only). Failure to do so can cause water entry and will void warranty.
6. Place luminaire base over the mounting plate. Tighten nuts (provided) on the studs to secure. (Figure 1)
7. Ensure stainless steel safety cable is connected between luminaire canopy and luminaire base.
8. Place luminaire over luminaire base, aligning the set screw with the feature shown in Figure 2. Twist canopy to lock into place. Tighten (1) 3mm hex head set screw to secure luminaire.
9. To adjust head angle, use 6mm hex head screwdriver to loosen screw at aiming joint. Aim luminaire head as needed and tighten screw to secure into place.

**Figure 1:**

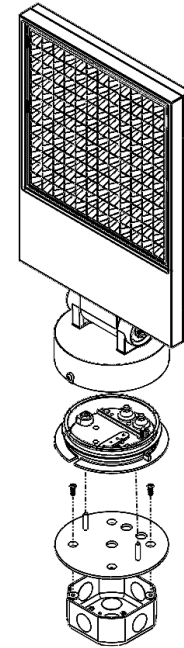

**Figure 2:**

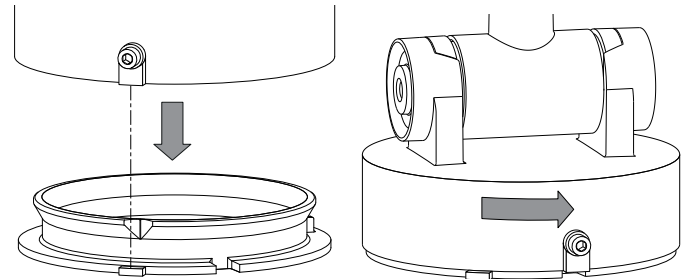

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Maintenance:**

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

**Replacement Parts**

See label inside of fixture for LED replacement part number.

Consult factory for all other replacement components.

**Product Safety Warnings:**

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**

**SUITABLE FOR WET LOCATIONS.**

**MIN 90°C SUPPLY CONDUCTORS.**

**CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.**

**CONVIENT AUX EMPLACEMENTS MOUILLÉS.**

**LES FILS D'ALIMENTATION 90°C MIN.**