


**Tools Required:**

Phillips medium screw driver  
4mm hex key  
17mm open-ended wrench


**Dimensions**

**A:** 14-3/4"  
**B:** 16"  
**C:** 6-7/8"

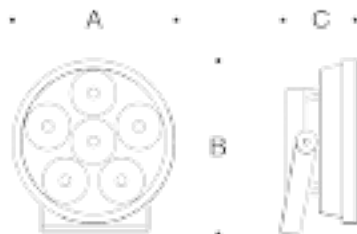

**Protection Class:** IP67

**Weight:** 25 lbs

**Notice to Installer for 84 519:**

1. See page 2 for specific product safety warnings.
2. BEGA floodlights may be installed by using a variety of accessory mounting equipment.
3. This floodlight may be aimed above the horizontal without any limitation. This floodlight can be aimed in any direction, including straight down.
4. **WARNING:** Maximum operating temperature 25°C ambient.
5. **WARNING:** do not use power tools. Use 5mm pin-in-hex wrench included with floodlight as needed.

**84 519 installation:**

1. Install the floodlight using the appropriate BEGA mounting accessory, or mount the stainless steel yoke directly to a surface capable of providing suitable anchorage for the weight of the fixture. Mounting holes are provided in the yoke.
2. If a BEGA mounting accessory is used, thread the outdoor cord through the water-tight compression fitting and lock it down securely. If a BEGA mounting accessory is not used, a separate wet location box must be supplied (by others) and a U.L. listed water tight compression fitting must be used to accept the cord from the fixture.
3. Make supply wiring and LED driver connections:  
MAIN VOLTAGE SUPPLY WIRE TO BLACK LED DRIVER WIRE  
NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LED DRIVER WIRE  
GREEN GROUND WIRE TO GREEN DRIVER WIRE

**Dimming (if applicable):**

DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE  
DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE

4. Floodlight is vertically adjustable between -10° and +170°. To adjust floodlight aiming angle, loosen (2) 6mm hex head screws on either side of the yoke where it attaches to the floodlight. Aim the floodlight as desired and then tighten the (2) 6mm hex head screws to lock into place.

**84 519 yoke adjustment:**

Vertical adjustment of BEGA spotlights is accomplished by loosening the lock bolts on either side of the yoke and moving the fixture to the desired aiming angle. Tighten the lock bolts to secure fixture at desired angle.

**Relamping/Maintenance**

The designation of the LED module is noted on a label inside the fixture.

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Replacement Parts**

|                                |        | <u>Description</u>                  | <u>Part No</u>  |
|--------------------------------|--------|-------------------------------------|-----------------|
| <b>Lamp:</b> 124.8W LED Module | 79 435 | Mounting bracket for pole top Ø 3"  | Consult factory |
|                                | 79 553 | Pole mount canopy for 5" O.D. pole  |                 |
|                                | 79 554 | Wall mount canopy                   |                 |
|                                | 79 550 | Pole mount arm for for 5" O.D. pole |                 |
|                                | 79 551 | Wall mount arm                      |                 |
|                                | 79 555 | Pole mount hub for pole top Ø 3"    |                 |
|                                | 70 762 | Pole top for 2 floodlights          |                 |
|                                | 70 763 | Pole top for 3 floodlights          |                 |
|                                | 70 764 | Pole top for 4 floodlights          |                 |
|                                | 70 766 | Pole top for 6 floodlights          |                 |
|                                | 70 761 | Cross beam for 3 floodlights        |                 |
|                                | 70 765 | Cross beam for 6 floodlights        |                 |
|                                | 71 110 | 180° glare shield                   |                 |

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

**Product Safety Warnings:**

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.**

**MIN 60°C SUPPLY CONDUCTORS.**

**CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.**

**LES FILS D'ALIMENTATION 60°C MIN.**

---