
Tools Required:

3mm hex key Flathead screwdriver, small

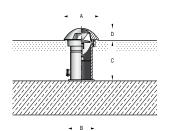

Dimensions

A: 4-3/4 "

B: 3-1/2 "

C: 3-3/4 "

D: 1-1/8 "



Protection Class: IP67

Weight: 3.1 lbs.


Notice to Installer for 88 671:

- 1. Fixture is pre-wired with 10' lengths of (2) #12 AWG wires and a waterproof cable gland entry into housing. DO NOT DISTURB THE SEAL.
- 2. This in-ground luminaire must be supplied by a UL Listed Class 2 electronic remote 24V DC power supply.
- 3. The fixtures are wet location rated, not submersible, they should not be installed in "low" points of concrete or earth installations where they are going to be submerged underwater for an extended period of time.
- 4. A level surface MUST be provided for proper installation.
- 5. Lamp supplied with luminaire.

NOTE: BEGA Fixtures may be damaged if connected to a conduit system that contains water. Article 300-5G of the National Electric Code requires that "conduits or raceways through which moisture may contact energized live parts shall be sealed or plugged at both ends".

88 671 installation:

- 1. The luminaire housing must be firmly mounted to a proper foundation. The top edge of the luminaire housing must be flush to the prepared floor. Failure to due so may result in the fixture not sealing properly and void the warranty.
- 2. Loosen the four faceplate screws and remove the trim ring.
- 3. Lift the glass, gasket, and reflector out of the recessed housing and store in a safe place until after the floor construction is complete.
- 4. Anchor the fixture to a foundation suitable for the intended vehicular or pedestrian loads. NOTE: MAKE SURE TO ALIGN THE FIXTURE HOUSING SO THE TRIM WILL BE ORIENTED AS PER DESIGN SPECS.
- 5. Connect the fixture to 1/2" plastic or steel conduit. Pull the provided 10' of wire through the conduit and thread conduit into provided brass adapter. DO NOT DISTURB THE FACTORY SEAL OF THE CONDUIT CONNECTOR. Use a suitable thread sealer on the 1/2" NPS conduit entry.
- 6. The enclosed protective cover is meant to protect the inner housing against debris during building activity. Pull the protective cover over the recessed housing up to the groove.
- 7. Finish the floor work.
- 8. Cut the protective cover at the floor level and remove.
- 9. Clean the housing and gasket sealing surface.
- 10. Place glass and reflector in lamp housing. Make sure the gasket is seated properly. Install trim ring.
- 11. Evenly tighten screws until the trim ring is firmly sealed against the housing.

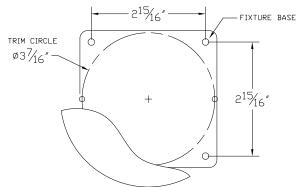







Relamping (LED MODULE)/Maintenance

Loosen trim screws and remove trim, glass and reflector. Undo module screws and pull out LED module, replace module, tighten module screws. Clean glass using only solvent-free cleaners. Replace trim and tighten screws, making sure gasket is seated properly.

Lamp: 1W LED, 24V DC

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Remote 25W LED Driver and box Remote 50W LED Driver and box 19 580

19 591

Replacement Parts

Description Part No Top cover 223212 Glass 112744.2 Gasket 83001795

LED Module (3000K) LED-0304/830 LED Module (4000K) LED-0304/840

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.



Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

MIN 90°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.

LES FILS D'ALIMENTATION 90°C MIN.

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.