


**Tools Required:**

- Digging tool
- Flat head screwdriver

**Overview:**

Weight: 1.7 lbs.



**Dimensions**  
**A:** 15-1/4"




**Notice to Installer:**

1. For use with floodlight equipped with 1/2" I.P.S. nipple.
2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

**Installation: Luminaire**

1. Mount floodlight to earth spike by screwing in 1/2" I.P.S. nipple. Tighten flat head screw to secure.
  2. Push earth spike vertically into soil until stable. If necessary, compact the soil around earth spike to secure.
  3. Route wire from floodlight to waterproof junction box (by others), see Figure 1.
  4. Make supply wiring and luminaire wiring connections inside junction box:  
MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
WIRE GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE
- Dimming (if applicable):  
DIMMING CONTROL WIRE (+) TO POSITIVE DIM LUMINAIRE WIRE  
DIMMING CONTROL WIRE (-) TO NEGATIVE DIM LUMINAIRE WIRE

**Figure 1:**

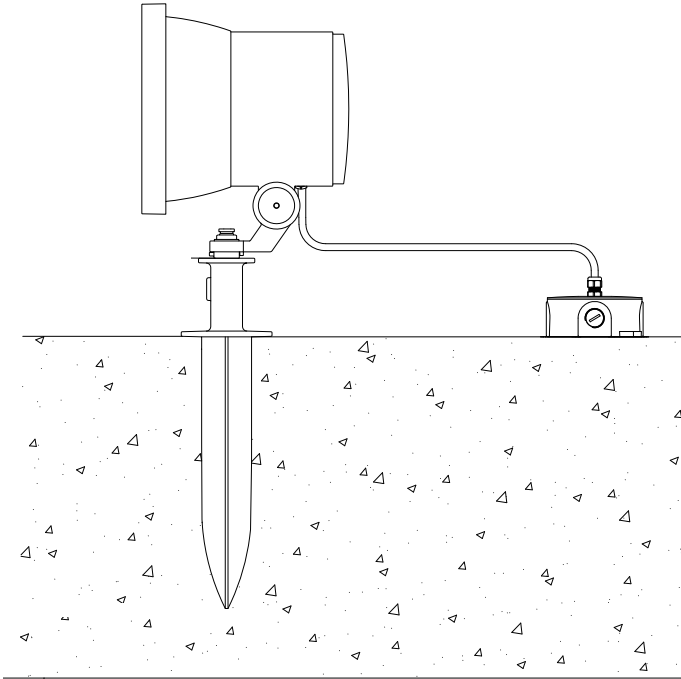

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Maintenance:**

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

**Replacement Parts**

Consult factory for all replacement components.