


**Tools Required:**

- Standard small screwdriver


**Overview:**

Weight: 1.3 lbs.

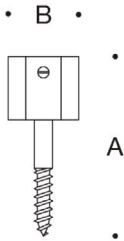

**Dimensions**

A: 3-1/8"  
B: 1"

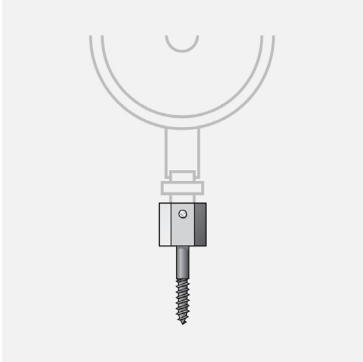

**Notice to Installer:**

1. For use with floodlights equipped with 1/2" IPS nipple only.
2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

**Accessory 70 252 - installation:**

1. Loosen set screw on the side of wood screw prior to installation.
2. Secure wood screw into mounting surface or tree.

**NOTE:** Be sure that the mounting surface has sufficient load capacity to support the floodlight and accessory.

3. Route wire from floodlight to wiring box.
4. Make supply wiring and luminaire wiring connections in the octagonal wiring box:

MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
WIRE GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE

Dimming (if applicable):

DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE  
DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Maintenance:**

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

**Replacement Parts**

Consult factory for all other replacement components.