

Tools Required:

- 4mm hex key
- 5mm hex key
- 8mm hex key
- Special tool (provided)

Protection Class: IP 65

Weight: 77.6 lbs.

Notice to Installer for 88 064:

1. See page 2 for specific product safety warnings.
2. Luminaire is rated for direct burial installations.
3. Consult structural engineer and local codes for burial and foundation size and specs.
4. Proper drainage below and around the buried portion of the luminaire **MUST** be provided. Failure to do so may void warranty.
5. Wet location listing does not imply suitability for exposure to standing water for long periods of time.
6. Fixture may be damaged if connected to conduit systems that contain water - Article 300-5G of the National Electric Code requires that "Conduits or raceways through which moisture may contact energized live parts shall be sealed or plugged at either or both ends."
7. LEDs are high-quality electronic components! Please avoid touching the light output opening of the LED directly during installation.

88 064 installation:

1. Pull supply wiring to a length where splices can be seen and made through the access door.
2. Fix ground plate to pole per Figure 3.
3. Route supply wiring through the mounting base and install pole (Figure 1, Figure 4).
NOTE: SIZE OF THE FOUNDATION REQUIRED TO SET THE UNIT IN CONCRETE MUST BE DETERMINED AT SITE BY STRUCTURAL ENGINEER.
4. Use special tool provided to unlock the access door lock and remove access door. Route the luminaire wiring down to the hand hold for connections.
5. Make supply wiring and luminaire wiring connections inside the luminaire:
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE
 GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE
 Dimming (if applicable):
 DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE
 DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE.
6. Install luminaire head and secure into place by tightening set screw (Figure 2)
7. Replace access door and lock.



Dimensions

- A:** 6-5/8 "
- B:** 23-5/8 "
- C:** 177 "
- D:** 31-1/2 "

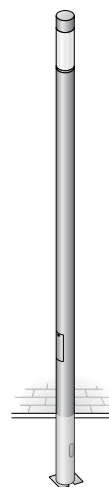


Figure 1

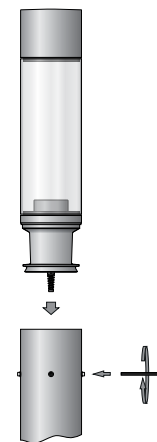


Figure 2

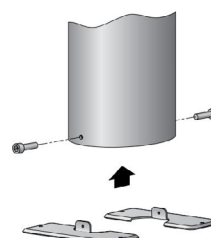


Figure 3

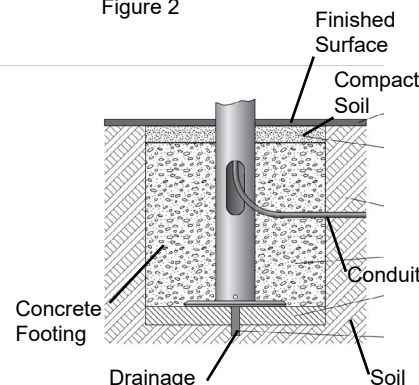


Figure 4

NOTE: Consult engineer and local codes for direct burial specification.

Relamping/Maintenance

No relamping required.

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Replacement Parts

Description	Part No
Diffuser	150375.7
Gasket (x2)	831248
Driver (120-277V)	76004-02
LED Module (3000K)	LED-0389/830
LED Module (4000K)	LED-0389/840

Lamp: 31W LED

Product Safety Warnings:

CAUTION- RISK OF FIRE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

SUITABLE FOR WET LOCATIONS.

MIN 90°C SUPPLY CONDUCTORS.

ATTENTION- RISQUE D'INCENDIE. CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.

CONVIENT AUX EMPLACEMENTS MOUILLÉS.

LES FILS D'ALIMENTATION 90°C MIN.

Tools Required:

Phillips medium screwdriver
Medium slotted screwdriver
Adjustable wrench

Installation Instructions for BEGA anchorage kits:

For use with modified 88 064 ONLY

Notice to Installer:

1. Luminaire is designed for installation with supplied anchorage kit.
2. Consult structural engineer and local codes for foundation size and specs.
3. Provide means to bring supply wiring to linear element in accordance with local code. Template has a 5" dia conduit opening for conduit entry.
4. Fixture may be damaged if connected to conduit systems that contain water - Article 300-5G of the National Electric Code requires that "Conduits or raceways through which moisture may contact energized live parts shall be sealed or plugged at either or both ends."
5. Anchorage kit must be installed in concrete pad/foundation.

NOTE: Adequate drainage must be provided in concrete foundation or grout.

Anchorage installation:

1. Assemble anchorage kit. Unscrew the (4) hex bolts and flat washers. Remove each hex bolt and washer. Align each anchor bolt with the hole in the template. See Figure 1. Attach each anchor bolt to the template by replacing the washer and hex bolt and tightening.

IMPORTANT: Bolt projection is 3-1/2" above finished grade, see Figure 2.

2. Install anchorage kit. Level template properly. Pour concrete.

CAUTION: Anchor bolts MUST be set vertically and centered off of the provided template for proper installation of linear element.

3. Remove (4) hex bolts and washers once anchorage is set.
4. Remove template. Smooth concrete pad as required.

NOTE: Allow adequate time for concrete to cure properly.

FIGURE 1

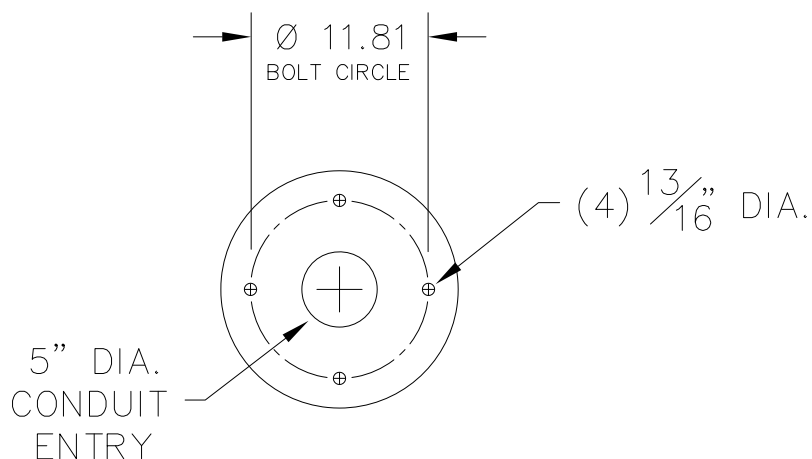


FIGURE 2

