


Tools Required:

- 3mm hex key
- 4mm hex key
- 11/32" Nut driver
- Phillips medium screwdriver

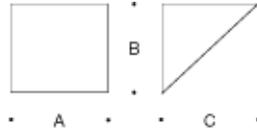

Dimensions

- A:** 10-1/4 "
- B:** 8-1/2 "
- C:** 9-5/8 "



Protection Class: IP65

Weight: 11.46 lbs.

Notice to Installer for 22 434:

1. See page 2 for specific product safety warnings.
2. Mounts directly over standard recessed 4" octagonal wiring box (by others), using mounting kit (supplied).
3. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting wall.
4. Integral LED module and LED driver supplied by BEGA.

22 434 - installation:

1. Loosen screw at luminaire canopy and remove luminaire base.
2. Make supply wiring and luminaire wiring connections in the octagonal wiring box:
 - MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE
 - NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE
 - GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE
- Dimming (if applicable):**
 - DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER WIRE
 - DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER WIRE
3. Note orientation labels on luminaire mounting plate. Test to make sure the mounting plate is level by adjusting the adaptor plate, if needed.
4. Place a small bead of silicone around the back side of the mounting plate and luminaire that will come in contact with the finished wall (exterior applications only).
5. Attach mounting plate to adaptor plate over the mounting screws using the (2) acorn nuts provided in the mounting kit. Tighten the nuts to back the screws into the wiring box and secure the plate to the box.
6. Mount luminaire to mounting plate and tighten canopy screw to secure luminaire, making sure orientation label is aimed correctly.
7. Place a small bead of silicone around the back side of the luminaire base that will come in contact with the finished surface (exterior applications only). Secure luminaire base to ceiling or wall surface using hardware by others (minimum thread size 8-32).
8. Tighten (3) 4mm hex screws to secure luminaire top to luminaire base.

Relamping/Maintenance

Remove trim and lens by loosening screws. Clean luminaire and lens using only solvent-free cleansers. Replace trim and lens. Tighten screws.

Lamp: 50.6W LED

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Replacement Parts

Description	Part No
Lens	140278
Lens gasket	830655
Driver (120-277V)	75945
LED Module (3000K)	(x2) LED-0260/830
LED Module (4000K)	(x2) LED-0260/840

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

BEGA 1000 Bega Way, Carpinteria, CA 93013 (805)684-0533 Fax (805)566-9474 www.bega-us.com © Copyright BEGA-US 2018

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

MIN 60°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.

LES FILS D'ALIMENTATION 60°C MIN.
