


Tools Required:

- 4mm Hex Key
- Phillips medium screwdriver
- Flathead small screwdriver

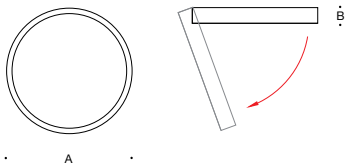

Dimensions

- A: 36-5/8"
- B: 5 1/2"



Weight: 39.0 lbs.

Notice to Installer for 24 231:

- Surface ceiling or surface wall applications only.
- Fixture must be wired directly to 1/2" NPT threaded wireway (by others).
- Wiring connections made inside fixture.
- In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting surface.
- LEDs are high-quality electronic components! Please avoid touching the light output opening of the LED directly during installation.
- IMPORTANT: The installation surface must have an adequate load-bearing capacity.

24 231 - Installation:

- Open luminaire faceplate by loosening (4) 4mm hex head screws on front of fixture. Fixture is hinged and will swing open.
- Remove luminaire faceplate (diffuser and frame) from mounting plate by loosening (2) 4mm hex screws at hinge, lift off frame. (Figure 1)(Figure 2)
- Route wiring inside fixture frame and make wiring connections using (provided) wiring block (see submittal for wiring entry location):  
MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE  
Dimming (if applicable):  
DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE  
DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE
- Install mounting plate onto finished surface using appropriate hardware (by others). For wall installations, the hinge must be located at the top.
- Place a small bead of silicone around the back side of the mounting plate (exterior applications only)
- To close luminaire cover, fit faceplate over mounting plate, tighten (2) 4mm hex screws at hinge and ensure the gasket is properly seated, tighten (4) 4mm hex head screws evenly to secure.

FIGURE 1

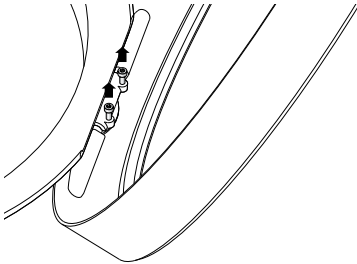


FIGURE 2


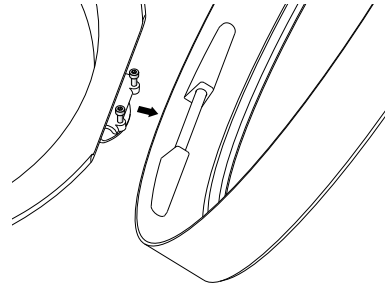


FIGURE 3

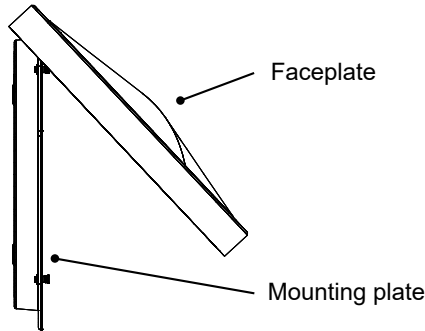

Relamping/Maintenance

Clean luminaire regularly with solvent-free cleansers from dirt and debris. Do not use high pressure cleaners.

Lamp: 117.6W LED

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Replacement Parts

Description	Part No
LED Driver (120-277V)	(3X) 76004-04
LED Module (2700K)	(4X) LED-0566/827 (6X) LED-0567/827
LED Module (3000K)	(4X) LED-0566/830 (6X) LED-0567/830
LED Module (3500K)	(4X) LED-0566/835 (6X) LED-0567/835
LED Module (4000K)	(4X) LED-0566/840 (6X) LED-0567/840

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

**Product Safety Warnings:**

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.**

**MIN 90°C SUPPLY CONDUCTORS.**

**CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.**

**LES FILS D'ALIMENTATION 90°C MIN.**

---