


Tools Required:

3mm hex key
11/32" Nut driver
Phillips medium screwdriver



Dimensions

A: 4-3/8"
B: 7-1/2"
C: 4-3/8"



Protection Class: IP64

Weight: 2.6 lb.

Notice to Installer for 33 814:

1. Mounts directly to a standard 4" octagonal recessed wiring box (by others) using mounting plate (supplied).
2. In conformance with UL Standard 1598, a silicone based sealant must be used between luminaire and supporting wall.


33 814 - installation:

1. Loosen (2) 3mm set screws on luminaire housing and remove outer casting with lens.
2. Feed luminaire wires through luminaire base and adapter plate.
3. Make supply wiring and luminaire wiring connections in the wiring box:
MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE
NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE
GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE
0-10V Dimming (if applicable):
DIMMING CONTROL WIRE (+) TO PURPLE DRIVER WIRE;
DIMMING CONTROL WIRE (-) TO GREEN DRIVER WIRE.
4. Place a bead of silicone RTV around the outer edge of the back side of the adaptor plate that will come in contact with the finished wall (exterior applications only).
5. Attach adapter plate to wiring box using (2) 8-32 x 1/2" screws provided. Choose screw slots based on wiring box such that fixture will mount straight, with lens pointing downward.
6. Apply silicone RTV to outside edge of luminaire base and mount luminaire base over the mounting studs in adaptor plate. Tighten nuts (provided) to secure base.

IMPORTANT: note position of orientation arrow on mounting plate and install accordingly.

7. Replace outer casting and tighten (2) set screws, making sure the gasket is seated properly.

Figure 1

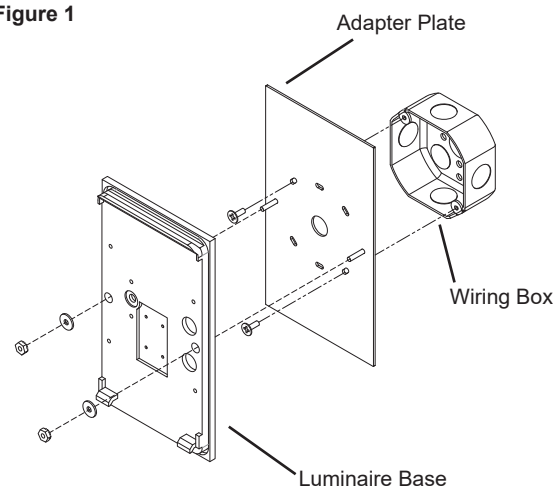

Relamping/Maintenance

Loosen (2) 3mm set screws on luminaire housing and remove outer casting with lens. Relamp. Clean luminaire and lens using only solvent-free cleansers. Replace lens and outer casing, making sure that the gasket is seated properly.

Lamp: 7.9W LED

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Replacement Parts

Description	Part No
Diffuser	140785
Housing gasket	831220
Driver (120-270V)	75943
LED (3000K)	LED-0322/930
LED (4000K)	LED-0322/940