BEGA Installation and Technical Information

Tools Required:

- · 3mm Hex Head Screwdriver
- Medium Phillips Head Screwdriver
- 5/16" Socket Wrench

Dimensions

A: 3-3/4"

B: 3-5/8"



Overview:

LED Watts: 8.4W System Watts: 11.0W

Controllability: Triac, ELV, 0-10V dimmable

Weight: 1.9 lbs.

Notice to Installer:

- 1. See page 2 for specific product safety warnings.
 2. Mounts directed by the recessed BEGA 19 538 small opening wiring box. WARNING: Do not use included mounting strap, driver installed inside wiring box.

 2. The result is a section component. Please avoid touching the light output.
- 3. LEDs are high-quality electronic components! Please avoid touching the light output opening of the LED directly during installation.

Installation:

- 1. Remove luminare from luminaire base plate by unscrewing (2x) 3mm hex head screws located on the side of the fixture.
- Disconnect LED wires and driver wires
- 3. Remove adapter plate from luminaire base by unscrewing (2) 5/16" hex nuts on interior of main fixture casting.
- 4. Make supply wiring and luminaire wiring connections inside the 19 538 wiring box:

MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE GREEN GROUND WIRE TO GREEN LUMINAIRE WIRE

Dimming (if applicable):

DIMMING CONTROL WIRE (+) TO POSITIVE PURPLE DRIVER DIM **CONTROL WIRE**

DIMMING CONTROL WIRE (-) TO NEGATIVE GRAY DRIVER DIM CONTROL

- 5. Make sure driver wires are routed through adaptor plate to reconnect LED wires and driver wires.
- 6. Guide driver into wiring box and attach adaptor plate direct directly to wiring box using philips screws provided. See Figure 2.
- 7. Re-attach luminaire base to adaptor plate using 5/16" hex head nuts provided.
- 8. Attach luminaire to luminaire base and secure using 2x 3mm hex head screws.

Figure 1:


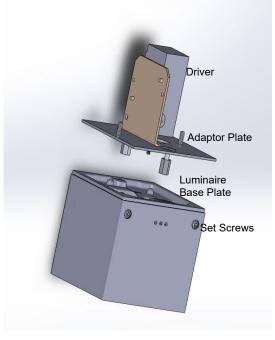


Figure 2 (Generic Image):

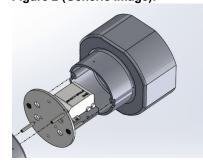

19538 Wiring Box

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Small Opening Wiring Box 19 538

Maintenance:

Clean regularly with solvent-free cleaner removing dust and debris.

Replacement Parts

See label inside of fixture for LED replacement part number.

Consult factory for all other replacement components.



Product Safety Warnings:
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR DAMP LOCATIONS. MIN 90°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS HUMIDE.

LES FILS D'ALIMENTATION 90°C MIN.