


Tools Required:

Phillips medium screwdriver
3mm hex screwdriver



Dimensions

A: 3-1/8 "

B: 2-7/8 "



Weight: 1.0 lbs.

Notice to Installer for 55 941:

1. See page 2 for specific product safety warnings.
2. Luminaire is non-IC rated. Insulation must be at least 3" from luminaire.
3. Luminaire not suitable for poured concrete construction.
4. Minimum plenum clearance is 7" to fit ceiling box. Minimum ceiling thickness $\frac{3}{8}$ ", maximum ceiling thickness is $1\frac{3}{4}$ ".
5. Ceiling cut out is 2-3/4"
6. Integral LED module and ceiling box with LED Driver included (**Figure 1**).

CEILINGBOX Instructions:

1. Fixture is connected to wiring box via quick-disconnect. Disconnect fixture and ceilingbox.
2. Unscrew (2) 3mm hex head screws to open ceiling box.
3. Bring supply wiring into ceiling box via strain relief bushing (**Figure 2**) and make connections from supply wires to driver wires (**Figure 3**):
MAIN VOLTAGE SUPPLY WIRE TO BLACK BALLAST WIRE(S);
NEUTRAL (COMMON SUPPLY WIRE TO WHITE BALLAST WIRE(S);
GREEN GROUND WIRE TO GREEN BALLAST WIRE(S).

0-10V Dimming (if applicable):

- DIMMING CONTROL WIRE (+) TO POSITIVE DRIVER DIM CONTROL WIRE
- DIMMING CONTROL WIRE (-) TO NEGATIVE DRIVER DIM CONTROL WIRE
4. Tighten (2) Phillips-head screws on strain relief bushing. Replace and tighten (2) 3mm hex head screws to close ceiling box. Connect the fixture to the ceilingbox via quick-disconnect.
5. Push the ceiling box through the ceiling cut-out. The ceiling box will rest on ceiling panels or other ceiling construction material.

Note: Minimum plenum clearance of 7" is required to fit ceiling box.

55 941 Installation Instructions:

1. Remove finished faceplate. Faceplate attaches to fixture by magnets.
2. Ensure fixture is attached to ceiling box via quick-disconnect.
3. Attach safety wire from luminaire to ceiling box by tightening (1) Philips-head screw into pre-drilled hole on ceiling box.
4. Place luminaire housing up into ceiling and tighten (2) 3mm hex-head screws to engage clamping system to attach and secure luminaire housing ceiling panel.
5. Replace faceplate.

Figure 1



Figure 2



Figure 3


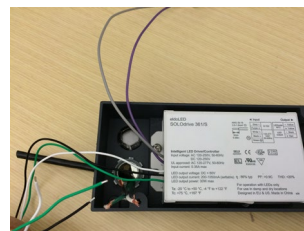


Figure 4 (generic image)

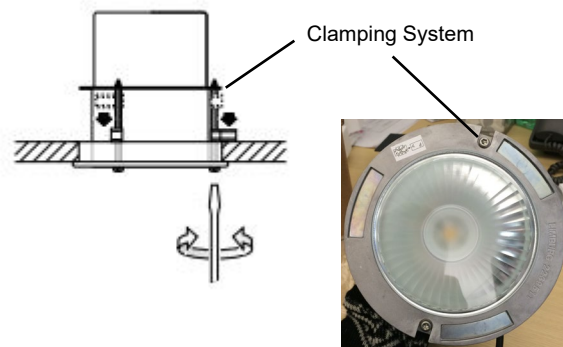

Accessories

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

Maintenance:

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

Replacement Parts

See label inside of fixture for LED replacement part number.
Consult factory for all other replacement components.

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR DAMP LOCATIONS.

MIN 90°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS HUMIDES.

LES FILS D'ALIMENTATION 90°C MIN.
