


**Tools Required:**

- 3mm hex head screwdriver
- 5mm hex head screwdriver
- 6mm hex head screwdriver
- Special tool (provided by BEGA)
- Adjustable wrench
- Phillips head screwdriver

**Overview:**

LED Watts: 40.8W (20.4W per floodlight)  
 System Watts: 49.0W  
 Controllability: 0-10V, TRIAC, and ELV dimmable  
 Weight: 114.0 lbs  
 Protection Class: IP65



**Dimensions**

**A:** 8-5/8  
**B:** 169-5/8  
**C:** 16-1/2



**Notice to Installer:**

1. See page 3 for specific product safety warnings.
2. See page 2 for instructions for adjustable floodlight.
3. Fixture may be damaged if connected to conduit systems that contain water - Article 300-5G of the National Electric Code requires that "Conduits or raceways through which moisture may contact energized live parts shall be sealed or plugged at either or both ends."
4. System elements ship in multiple parts, the head and pole will be in separate boxes.
5. Adequate foundation must be provided for intended loading. Size of footing depends on the topography, soil composition, and wind load and must be determined by a structural engineer on site. Adequate drainage must be provided in concrete foundation or grout.
6. **WARNING: DO NOT INSTALL SYSTEM ELEMENT POLE WITHOUT SYSTEM ELEMENT HEAD. UNLOADED POLES CAN EXPERIENCE EXCESSIVE VIBRATION, CAUSING THE STRUCTURAL INTEGRITY TO BE COMPROMISED. INSTALLING THE POLE WITHOUT THE HEAD WILL VOID WARRANTY.**
7. SUITABLE FOR INSTALLATION IN WIND ZONES WITH A MAXIMUM WIND SPEED UP TO 100 MPH PER EN 60598.


**79993 Anchor installation:**

1. Anchor kit 79993 must be installed in concrete. Attention to alignment, leveling, and location is required for proper installation.
2. Provide means to bring supply wiring to building element in accordance with local code. The template has a 4-1/2" conduit opening for conduit entry.
3. Use template (Figure 1) and anchor bolts provided. Anchor bolts can be installed by either attaching template to concrete form, or by inserting anchor bolts into poured concrete. Ensure template and anchor bolts are leveled properly.
4. Align and level template so the orientation of the access door matches the desired orientation of the linear element. Access door will align with bolts. Bolt projection is 3"
5. Once the concrete footing is set, remove template and pull supply wiring to a height of 36" to allow for wiring connections to be made later.


**84725 pole installation:**

1. System elements ship in multiple parts. Have system element head ready to install, or assemble head and pole together before erecting pole. Do not install pole without element head. See steps 2-4 and element head installation for additional details.
2. Drop wire bundle and flexible conduit into system element pole for wiring connections to be made at base.
3. Insert building element head into building element pole.
4. Secure building element head to pole by tightening (3) 5mm hex head set screw located on the pole. System element heads are fully rotatable on element pole. Asymmetric light output heads will ship with removable aiming label.
5. Place pole over anchors ensuring the fixture is oriented correctly for desired light output direction.
6. Use leveling nuts and washers (provided with anchor kit) to level pole.
7. Grout under the baseplate of the pole as shown in Figure 2.
8. Wiring connections are accessible behind the access door on the system element pole. Access door can only be opened using special tool (provided).  
 Make supply wiring and cable connections behind access door:  
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
 GREEN (GROUND) WIRE TO GREEN LUMINAIRE WIRE  
 0-10V DIMMING (OR DALI DIMMING) IF APPLICABLE  
 DIMMING CONTROL (+) TO POSITIVE LUMINAIRE CONTROL WIRE  
 DIMMING CONTROL (-) TO NEGATIVE LUMINAIRE CONTROL WIRE
9. Additional grounding is required - connect ground supply wire to both green luminaire wire

**Figure 1:**

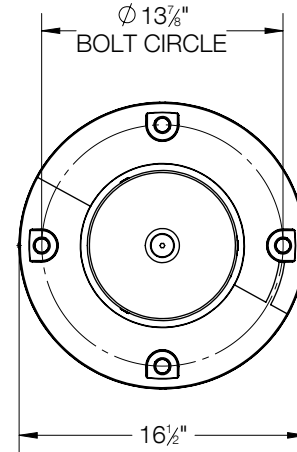

**Figure 2:**

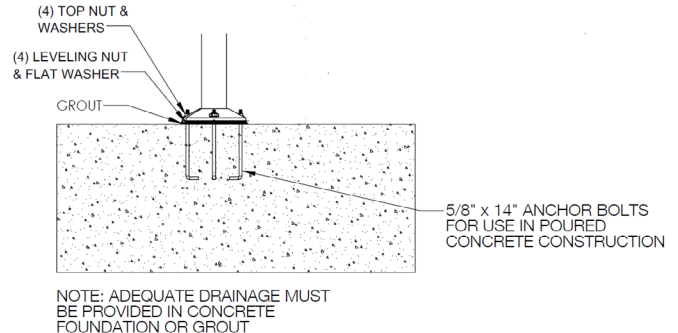

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Maintenance:**

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

**Replacement Parts**

See label inside of fixture for LED replacement part number.


Consult factory for all other replacement components.

**Tools Required:**

- 3mm hex head screwdriver
- 5mm hex head screwdriver
- 6mm hex head screwdriver
- Special tool (provided by BEGA)
- Adjustable wrench
- Phillips head screwdriver

**Overview:**

LED Watts: 40.8W (20.4W per floodlight)  
 System Watts: 49.0W  
 Controllability: 0-10V, TRIAC, and ELV dimmable  
 Weight: 114.0 lbs  
 Protection Class: IP65



**Dimensions**

**A:** 8-5/8  
**B:** 169-5/8  
**C:** 16-1/2




**Notice to Installer:**

1. See page 3 for specific product safety warnings.
2. See page 2 for instructions for adjustable floodlight.
3. Fixture may be damaged if connected to conduit systems that contain water - Article 300-5G of the National Electric Code requires that "Conduits or raceways through which moisture may contact energized live parts shall be sealed or plugged at either or both ends."
4. System elements ship in multiple parts, the head and pole will be in separate boxes.
5. Adequate foundation must be provided for intended loading. Size of footing depends on the topography, soil composition, and wind load and must be determined by a structural engineer on site. Adequate drainage must be provided in concrete foundation or grout.
6. **WARNING: DO NOT INSTALL SYSTEM ELEMENT POLE WITHOUT SYSTEM ELEMENT HEAD. UNLOADED POLES CAN EXPERIENCE EXCESSIVE VIBRATION, CAUSING THE STRUCTURAL INTEGRITY TO BE COMPROMISED. INSTALLING THE POLE WITHOUT THE HEAD WILL VOID WARRANTY.**
7. SUITABLE FOR INSTALLATION IN WIND ZONES WITH A MAXIMUM WIND SPEED UP TO 100 MPH PER EN 60598.


**84725 floodlight installation:**

1. System elements ship in multiple parts. Have system element head ready to install, or assemble head and pole together before erecting pole. Do not install pole without element head. If floodlight segment and aluminum pole shipped separately, follow steps 2-5.
2. Separate each floodlight segment from the clamping ring as shown in Figure 1, loosening the (2) 6mm hex head screws located inside the tube.
3. Insert the clamping ring, as shown in Figure 2, into the upper opening of the building element pole and align accordingly. Arrows on the clamping ring indicate the floodlight direction.
4. Place the floodlight over the clamping ring as shown in Figure 1, and secure into place by tightening the (2) 6mm hex head screws.
5. The driver for the floodlight is located in a gasketed box on the din rail located behind the access door. There is a 15', 18/2 cable that connects the driver and the floodlight assembly, this wiring connection is made inside the box. If access to these connections is required, open gasketed box using a Phillips head screwdriver. Supply wiring connections will be made in the pole, behind the access door.
6. Floodlight wiring connections are accessible behind the access door on the system element pole. Access door can only be opened using special tool (provided).  
 Make supply wiring and cable connections behind access door:  
 MAIN VOLTAGE SUPPLY WIRE TO BLACK LUMINAIRE WIRE  
 NEUTRAL (COMMON) SUPPLY WIRE TO WHITE LUMINAIRE WIRE  
 GREEN (GROUND) WIRE TO GREEN LUMINAIRE WIRE  
 0-10V DIMMING (OR DALI DIMMING) IF APPLICABLE  
 DIMMING CONTROL (+) TO POSITIVE LUMINAIRE CONTROL WIRE  
 DIMMING CONTROL (-) TO NEGATIVE LUMINAIRE CONTROL WIRE
7. Additional grounding is required - connect ground supply wire to both green luminaire wire and green grounding lug located on the din rail behind the access door in element pole.
8. Close access door.
9. To aim floodlight, loosen (2) 3mm hex head screws above and below the floodlight to loosen the gimbal assembly. Floodlight can be aimed up to 30°. Tighten screws to lock into place.

**Figure 1:**

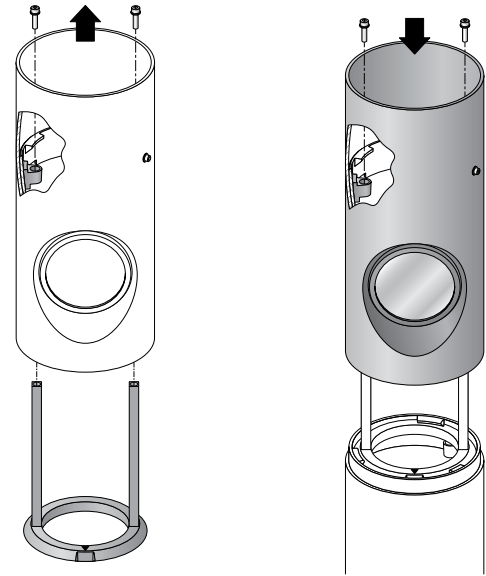

**Figure 2:**

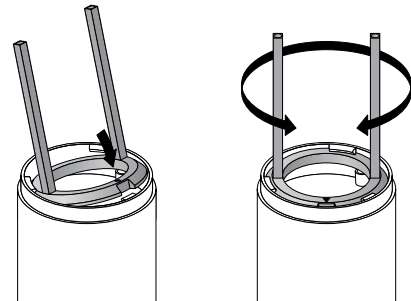

**Accessories**

Please refer to the appropriate accessory installation sheet for further instruction when applicable.

**Maintenance:**

Clean regularly with solvent-free cleaner removing dirt and debris. Do not use high pressure cleaners.

**Replacement Parts**

See label inside of fixture for LED replacement part number.

Consult factory for all other replacement components.

**Product Safety Warnings:**

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR MOUNTING WITHIN 1.2 m (4 ft) OF THE GROUND. SUITABLE FOR WET LOCATIONS. MIN 60°C SUPPLY CONDUCTORS.**

Installer agrees that the prevention of accidents to its workers who handle, install, lift, or load Bega supplied products is solely Installer's responsibility. In handling, lifting, handling or installing Bega supplied products, Installer shall comply with its own internal safety plans and guidelines and all state and federal laws, standards, ordinances, rules, regulations, codes, requirements, orders, and requirements, including those issued by local, state or federal Occupational Health and Safety agencies, concerning safety and weight limitations now in force or hereafter in effect. Installer further agrees and understands that lifting or carrying loads heavier than 50 pounds may increase the risk of injury, and any persons lifting or carrying Bega supplied products exceeding 50 pounds shall assess the risks of lifting the materials for each person and, when appropriate, use two or more people to lift or handle the material or use special lifts or mechanical means.

**CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. PEUT ÊTRE INSTALLÉ À MOINS DE 1,2 m (4 pi) DU SOL. CONVIENT AUX EMPLACEMENTS MOUILLÉS. LES FILS D'ALIMENTATION 60°C MIN.**